

Physique Apollo is a popular, strong and multi-purpose workstation




features & benefits

- Flat packed, easy to transport and quick to assemble
- Choice of full graphic wrap and kneehole styles
- No tools required
- Constructed from composite materials and flexible MDF tambour
- Choice of luxury foam backed loop nylon, Front runner or Prelude fabric wraps
- Beech and Aluminium tambour wraps
- Load bearing up to 75kgs approx
- Kneehole wrap dimensions: 966mm (H) x 2700mm (W) approx
- if a lockable door is required specify the full wrap style unit.

hardware specifications	graphic specifications	additional info
<p>Assembled Dimensions (mm): 1000mm (H) x 1000mm (W) x 500mm (D)</p> <p>Weight: 15kg approx</p> <p>Load Bearing: 75kg Approx</p>	<p>Recommended visible size for front: Full Wrap 966mm (H) x 950mm (W)</p> <p>Full wrap dimensions (mm): 966mm (H) x 2525mm (W)</p> <p>Kneehole Wrap dimensions (mm): 966mm (h) x 2700mm (w) 966mm (H) x 950mm (W)</p>	<p>Recommended Accessories</p> <p>AB112A Standard carry bag</p> <p>AC311 Carry case</p> <p>DESK00 Cable management port#</p> <p>RK321 Lockable door for Double D</p>

We are continually improving and modifying our product range and reserve the right to vary the specifications without prior notice. All dimensions and weights quoted are approximate and we accept no responsibility for variance. E&OE.

Assembly Instructions

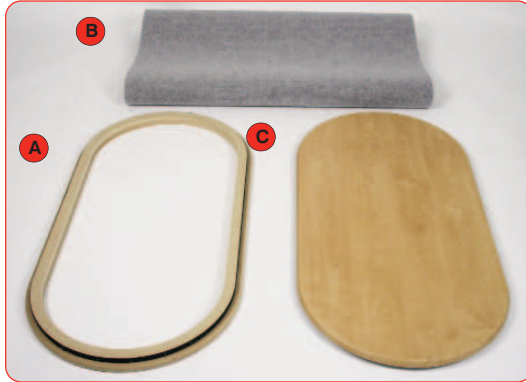

Kit Includes

- A** Base
- B** Loop nylon wrap
- C** Thermoformed Top



1 To attach the wrap place the base on the floor with the hook side facing upwards then simply locate the wrap in the centre of one side and begin to attach the wrap



2 Continue to attach the wrap around the base until fully attached



3 Once the wrap is fully attached make sure that the wrap is butted up against each other to make a seamless join



4 To attach the top simply lower the top into place and make sure that the hook and loop is attached all the way around